



Safety & Setup Instructions

- *Do not plug or unplug unit in wet or damp conditions*
- *Always unplug unit when working on unit or draining tray*
- *Handle panels carefully, they have sharp points and edges*
- *Gloves should be worn when adding pH up or down*
- *Use a large spoon or stirring paddle to mix nutrients*
- *Place PyramidGarden on level area and away from high winds*



Please ensure to set up your Pyramid Garden on a flat level area.



Safety & Setup Instructions



When opening the box of your Pyramid Garden, it should include:

- Four pyramid panels
- Grow pucks
- Net pots
- Irrigation with misters
- Extrusion connectors
- Control box / cycle timer
- Starter seeds & Nutrients
- pH test kit
- Jet & Oxygen pump (built in)
- Tray / reservoir
- Screw top
- Air stone





Safety & Setup Instructions

**** Assembly ****

To build the pyramid:

On a soft surface, prepare the four panels and extrusion strips.



Ensure the bevels are facing up and the flat corner is noted for the top of the pyramid.



The curved part of the extrusion strips will be the top.



Align the first panel and strip. Insert the strip starting from the bottom and working to the top. Ensure the strips are snug on the panels. Bottom strip should be aligned with the top of the bevel. See photo on right.



There should be a gap at the top of the panel to allow for the screw top. (Installed last)





Safety & Setup Instructions


**** Assembly ****

Align the second panel with the bottom of the strip and gently squeeze firmly to connect the panel towards the top.


Tip: Use the holes as grab holes to bring panels and strips together.



Continue adding panels and strips until the last strip has been installed.

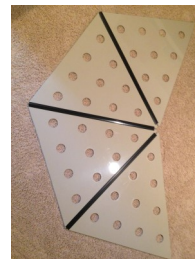

Without the last strip and first panel being connected, pull the panels upward to create the pyramid form.

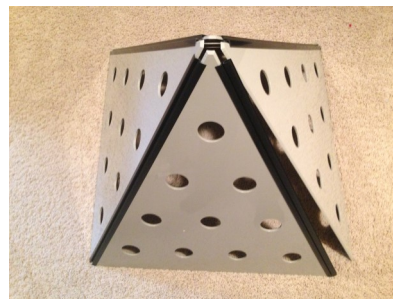

Between the gap, insert the top screw and slide to the top. This component will bring the panels together and strengthen the pyramid.






Safety & Setup Instructions

**** Assembly ****

Align the screw as shown.

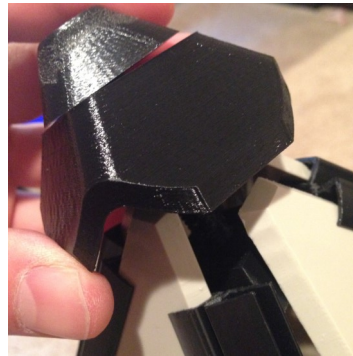


Make the final connection of the last panel and strip to complete the pyramid form.



Ensure the top screw is aligned as shown in photo. Tighten the screw clockwise until you feel the whole pyramid tighten up.

Tip: Do not over tighten as screw may break.

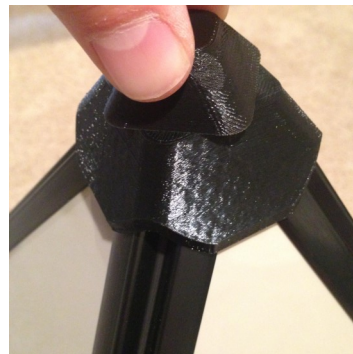

Pyramid grow are should be complete as show in photo.

Insert irrigation pipe by screwing into connector. Ensure misters are pointing towards corners of trays as best as possible.



Insert oxygen stone tube into oxygen pump port.





Safety & Setup Instructions

**** Assembly ****


Irrigation and oxygen irrigation shown in photo with filter as complete.



Take wrapping off cycle timer.



Place the pyramid into the tray area ensuring that all the panel fit snugly inside the lip of the tray.

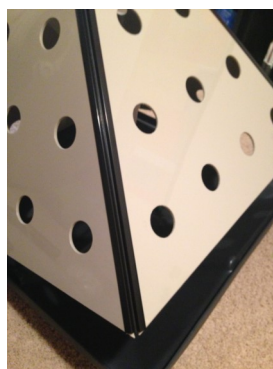

Now you are ready to grow!